

# Car Door Hinge Lubrication

This playbook outlines the steps required to lubricate car door hinges effectively. The goal is to eliminate squeaking noises and ensure the door operates smoothly.

## Step 1: **Gather Supplies**

Collect the necessary materials for the task: a can of WD-40 or suitable lubricant spray, a rag or paper towels, and protective gloves.

## Step 2: **Prep Area**

Open the car door and use the rag or paper towels to clean around the hinge area, removing any dirt or debris that might be present.

## Step 3: **Apply Lubricant**

Shake the lubricant can well before use. Then, spray a small amount directly onto the car door hinges. Be careful not to overspray onto the car's body or interior.

## Step 4: **Work Hinges**

After applying the lubricant, slowly open and close the door several times to work the lubricant into the hinge mechanism.

## Step 5: **Wipe Excess**

Use a clean rag or paper towel to wipe off any excess lubricant from the hinge area to prevent dirt accumulation.

## Step 6: **Test Door**

Open and close the door several times to ensure that the squeaking has stopped and the door is swinging smoothly. Repeat lubrication if necessary.

# **General Notes**

## **Safety**

Wear protective gloves to keep your hands clean and avoid contact with the lubricant, which may be harmful to skin.

## **Environmental Care**

Use the lubricant in a well-ventilated area and dispose of any used rags or paper towels properly to minimize environmental impact.